


700Ford Series Baby monitors Users Guide

Easy and Convenient to Use

Checklist

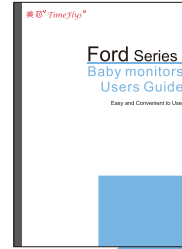

A user manual



AAA Ni-MH rechargeable battery



A parent unit


A baby unit




Two AC adaptors

Use method

Step one: Plug in power to the baby unit, set the slide switch on channel A or channel B, turn the unit on, according to the demand to decide to open the night light or not.

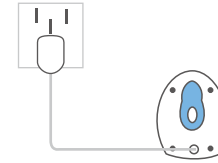

Step two: The parent unit at least 1 meter from the baby unit, power up the parent unit by AC adaptor or by loading three alkaline batteries, set the slide switch on the same channel with baby unit, and it is ready for use. You must make the parent unit at the same channel with the baby unit.



1.5-3m

Cautions

Bundle the power adapter cord neatly with a twist tie, to avoid twist the baby and cause accident.

Instruction of Parent Unit



- (1) Power /sound light
 - Green light indicate turn on
 - Light flash indicate receive sound
 - Red light indicate the batteries in low electric
- (2) Volume control knob
 - Rotating it upwards increase volume

- Rotating it downwards decrease volume
- (3) Channel /power
 - In the middle position is turn off
 - In the side of A or B turn on and select the channel

Instruction of Baby Unit



- (1) Night light
 - The light shows green when the baby unit turns on
- (2) Power light

- (3) Channel /power
 - In the middle position is turn off
 - In the side of A or B turn on and select the channel
- (4) Night light control

Technical Parameters

700Ford series				
Modulation mode	FM	FM	FM	FM
Frequency	A:864.5MHz B:863.3MHz	A:915.4MHz B:914.2MHz	A:40.67MHz B:40.69MHz	A:49.87MHz B:49.85MHz
Channel	2	2	2	2
Baby unit Power	10dBm	-17dBm	10dBm	-10dBm
Sensitivity of Parent Unit	-108dBm	-108dBm	-108dBm	-108dBm
AC Adaptor	6V 300mA	6V 300mA	6V 300mA	6V 300mA
Battery	4.5V=3×AAA	4.5V=3×AAA	4.5V=3×AAA	4.5V=3×AAA
Distance (open field)	400m	300m	300m	250m

Parent unit Baby unit



red

Parent unit Baby unit



blue

Other Functions

- ◆ If the battery level lower than 3.3V, the power light of parent unit flashes in red.This moment, you must charge or change battery.
- ◆ Auto mute function,when the parent unit receives a signal from baby unit below a level, we define 50dBm (we think 50dBm is a normal environmental noise),it does not open and keeps silent (no noise).
- ◆ Parent unit and Baby unit have rechargeable function.(Parent unit included rechargeable battery in this package)

Charge Indication:

When charge the unit under ON status, the power light shows in red and green.

When charge the unit under OFF status,the power light shows in red.



Cautions

- This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and not intended for use as a medical monitor.
- Please do not use other power adaptors which may not fit this product configuration.
- Please do not expose the baby monitor to extreme cold,heat wet or direct sunlight

Troubleshooting

Problem	Possible cause	Solution
Power light does not light	<ul style="list-style-type: none"> ▪ Unit not turn on ▪ AC power adapter not connected to the DC jack ▪ Batteries low 	<ul style="list-style-type: none"> ▪ Press On/Off button ▪ Connect AC power adapter to the DC jack ▪ Replace batteries
Power light is blinking	<ul style="list-style-type: none"> ▪ Not connect well ▪ Batteries low 	<ul style="list-style-type: none"> ▪ Make sure the connection OK ▪ Replace batteries
High pitched noise	<ul style="list-style-type: none"> ▪ Units too close to each other ▪ Volume set too high 	<ul style="list-style-type: none"> ▪ Move parent unit away from baby unit (at least 1 meter / 3 feet) ▪ Decrease the volume
No sound on parent unit	<ul style="list-style-type: none"> ▪ Volume off or too low 	<ul style="list-style-type: none"> ▪ Increase the volume
No connection between units	<ul style="list-style-type: none"> ▪ Out of range of transmitted signal ▪ Units are set to different channels 	<ul style="list-style-type: none"> ▪ Move parent unit closer to baby unit ▪ Set channel selection switches to the same position on both units.

- Make sure the baby unit and the adapter cord are always out of reach of the baby,at least 1 meter/3 feet away from the baby or crib,to avoid a possible strangulation hazard.
- Never cover the baby unit or parent unit with anything such as a towel or a blanket,clean the product please make sure under off-position.



Ford Series Baby Monitor Maintenance Record

User Profile

Name: _____ Phone: _____ E-Mail: _____

Address: _____ Post Code: _____

Retailer Information

Name : _____ Phone: _____

Address: _____ Post Code: _____

Invoice No: _____ Selling Date: _____

Repair date	Fault description/failure cause/processing results	Use of spare parts	Completion date	Maintenance center name/maintenance personnel signature



美芯集成电路（深圳）有限公司
中国深圳高新区科技中二路软件园四栋516室
电话：（86）755-8618-5088
传真：（86）755-8618-5000
Email: sales@mcdevices.com
Website: http://www.mcdevices.com

MC Devices Co., Ltd.
ADD: 516 Bld. 4, National Software Park,
2Kejizhong Rd., Shenzhen Hi-Tech,Park,
Shenzhen, Guangdong, China
Tel:86-755-8618-5088
Fax:86-755-8618-5000
Email: sales@mcdevices.com
Website: http://www.mcdevices.com